
easypix®

Keep it real.


WDV 5270 **FULL HD**



Use Manual

1. Parts of the camcorder

- 1: LCD screen
- 2: Left/Mode button
- 3: Up/Playback button
- 4: Right/Self-timer button
- 5: OK/MENU button
- 6: Down/Delete button
- 7: Shutter button
- 8: Strap
- 9: Power button
- 10: T/Zoom in button
- 11: W/Zoom out button
- 12: LED button
- 13: AV out jack
- 14: USB jack
- 15: Jacks cover
- 16: HDMI jack
- 17: Microphone

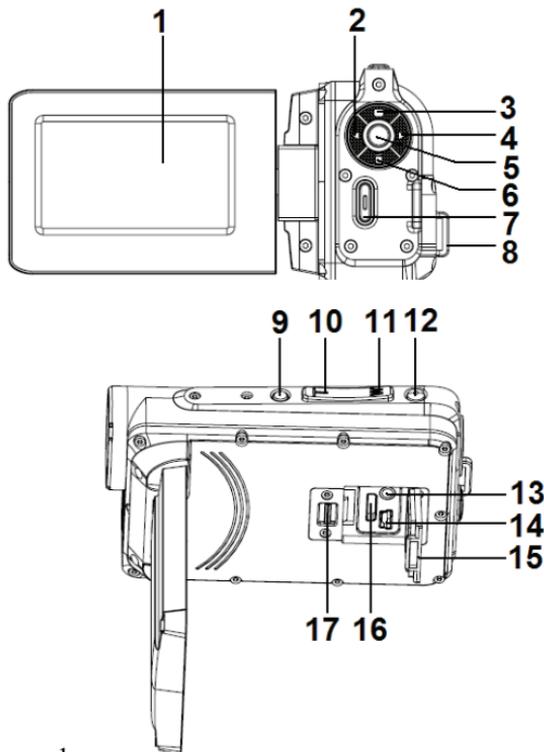


17: Cover locker

18: Lens

19: Speaker

20: Microphone


21: Camera Light

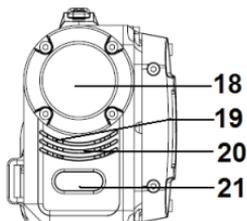

22: ripod socket

23: Battery cover


24: Cover lock

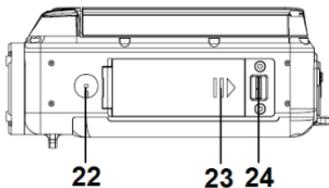

2. Preparing for using

Installing the Battery

1. Push the lock on the battery cover (1) to the right to open the battery cover.
2. Lithium-ion battery into the compartment. Note that the metallic contacts must be aligned with the contacts in the compartment.
3. After the battery is properly installed, close the battery cover.

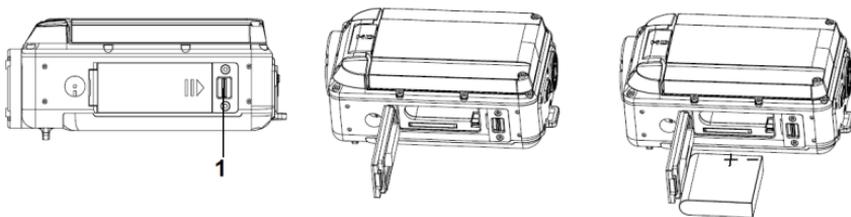

Charging the battery

When the battery level is low please charge the battery.

- 1: Turn the camcorder power off .
- 2: Connect the camcorder and PC via the attached USB cable. When the battery is being charged the charger lamp will light blue.
- 3: When the charge is completed the charger lamp turns off. Disconnect the camera and the PC.


Caution:

- It is normal that when it is charging the camera body is warm.

Inserting the Memory Card

If you want record more you have to use a SD or MMC card. Turn off the camcorder before inserting or removing the memory card. Be sure to orient the card correctly when inserting it. Never try to force the memory card into the slot when you feel resistance. The SD memory card has a write protect switch, which used to protect data from accidental deletion. Therefore, whenever you want to record, format or delete files in the SD card, disable the write protection beforehand.

1. Turn off the camcorder.
2. Push the lock on the battery cover to the

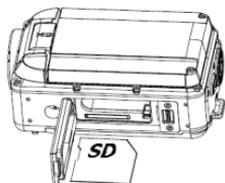

right to open the battery cover.

3. Insert the memory card as illustrated.
 4. After the memory card is properly inserted, replace the battery cover.
- **To release the memory card press the edge of the card gently.**

3. Using the camcorder

Turning the Camcorder On and Off

1. Open the LCD screen to turn on the camcorder.
2. Close the LCD screen to turn the camcorder off.

Attention: You can also press Power button to turn the camcorder on/off.

To save battery power, the camcorder will automatically turns off 1/3/5 minutes after the last control accessed. You can change the power-off time by setting the function [Auto Power off] in the Setup menu.

Change the record mode

There are three modes in this camcorder. Press the **LEFT/MODE** button to change the mode, each time the **LEFT/MODE** button is press the mode is changed.

Display	Title	Description
	Capture mode	For taking still photos.
	Video mode	For recording movie clips.
	Audio mode	For recording audio files.

Press the UP/PLAYBACK button to navigate and preview movie clips in the movie folder, photos in the photo folder and audio files in the audio folder. Press the Shutter button to enter video record mode.

Recording a video clip

1: Turn on the camcorder and set the camcorder to video record mode



2: Zooming:

Press the **T** or **W** button to zoom in or zoom out the subject. The value of magnification level appears on the LCD monitor.

- 3: Press the **SHUTTER** button to start recording.
- 4: Press the **SHUTTER** again to end the recording. If the memory is full the video camera will stop recording automatically.

Taking still images

1. Set the camcorder to capture mode, the icon  appears on the LCD screen.
2. Zooming:
Press the **T** or **W** button to zoom in or zoom out the screen. The zoom bar appears on the LCD monitor.
3. Hold the camcorder steady and then press the **SHUTTER** button down to take a picture.

4. Playback

Playing back movie clips

- 1: Set the camcorder to video record mode, and then press the **UP/PLAYBACK** button to set the camcorder to playback mode. All movie

clips saved in the movie folder show in thumbnail mode.

2: Press **OK** button to show it in full screen. Then press the **LEFT** or **RIGHT** button to select the movie clips you want to playback.

3: Press the **OK** button to start playing. When the files is playing press the **OK** button to end the playing. Press the **UP** button to pause it and press **OK** button to continue.

4: When all the files show in the thumbnail mode, press the UP/PLAYBACK button to navigate and preview movie clips in the movie folder, photos in the photo folder and audio files in the audio folder.

Press the **Shutter** button to enter video record mode.

Playback still image

1: Set the camcorder to capture mode and then press the PLAYBACK button to preview all photos saved in the photo folder.If there are no images stored, a message [No Files] appears.

2: Press the **RIGHT** or **LEFT** button to preview the previous or next image.
Press the **OK** button to preview it in full screen mode.

3: Zooming:

Press the **T** or **W** button to zoom in or zoom out the image. When the picture is enlarged you can press the **UP, DOWN, LEFT, RIGHT** button to browse the details of the image.

4: When all the files show in the thumbnail mode, press the **UP/PLAYBACK** button to navigate and preview movie clips in the movie folder, photos in the photo folder and audio files in the audio folder.

Press the **Shutter** button to enter video record mode.

Playing back audio files

- 1: Set the camcorder to audio record mode and then press the **UP/PLAYBACK** button to preview all audio file stored in the audio folder..
- 2: Press the **RIGHT** or **LEFT** button to select the audio file you want to playback.
- 3: Press the **OK** button to start playing and press it again to end the playing.
Press the **UP** button to pause it and press **OK** button to continue.
- 4: When all the files show in the thumbnail mode, press the **UP/PLAYBACK**

button to navigate and preview movie clips in the movie folder, photos in the photo folder and audio files in the audio folder.

Press the **Shutter** button to enter video record mode.

5. Technical Specifications

Function	6-in-1 Multi-functional Camera (Digital Still Camera, Digital Video Camera, Digital Voice Recorder, Video Player, USB Mass Storage and PC Cam)
Image Sensor	5MP CMOS Sensor
Lens (Focusing)	Fixed Focus
Aperture Ratio	F=3.1mm
Focus Length	f=7.5mm
Optical Zoom	N/A
Digital Zoom	4X

Display	2.7" TFT LCD
Exposure Mode	Auto
White Balance	Auto / Sunny / Cloudy / Fluorescent / Incandescent
Shutter Speed	1/2 ~ 1/1800 sec.
Digital Effects	N/A
Internal Memory	32MB NAND Flash
Memory Card Slot	SD/MMC Up to 32GB
Microphone	Yes
Speaker	Yes
Interface	HDMI / USB 2.0 / AV Out
Television System	NTSC / PAL
Battery Type	Li-ion Battery
Power Source	Rechargeable Li-ion Battery
Digital Still Camera	

Resolution	4000 x3000 (Interpolated) 12M 3200 x 2400 (Interpolated) 8M 2592 x 1944 5M 2048 x 1536 3M
Sensitivity	Auto
File format (Image)	JPEG Compatible
Scene Mode	N/A
Digital Camcorder	
Resolution	1920 x 1080 @ 30 fps 1280 x 720 @ 30 fps 848 x 480 @ 60 fps
File Format (Video)	MOV (H.264)
Digital Voice Recorder	
File Format (Audio)	WAV
Windows Mass Storage	
Windows Mass storage (Driver)	Windows 2000/XP/ISTA32-bit (Mass Storage only) above